

# SERIES 'HCI & 'HSS' HORIZONTAL PUMPS


OPERATION AND  
SERVICE GUIDE  
O-2520B  
SEPT 2005

MODEL	
HCI 1"	HSS 1"
HCI 1 1/2"	HSS 1 1/2"

Refer to Bulletin P-108 and Parts Lists P-2275 (HCI), P-2250 and P-2255 (HSS).



## SAFETY PRECAUTIONS BEFORE STARTING PUMP

1. Read operating instructions and instructions supplied with chemicals to be used.
2. Refer to a chemical resistance data chart for compatibility of materials in pump with solution to be used.
3. Note temperature and pressure limitations.
4. Personnel operating pump should always wear suitable protective clothing: face mask or goggles, apron, gloves.
5. All piping must be supported and aligned independently.
6. Always close valves slowly to avoid hydraulic shock.
7. Ensure that all fittings and connections are properly tightened.
8.  Ground motor before connecting to electrical power supply. Failure to ground motor can cause severe or fatal electrical shock hazard. **DO NOT** ground to gas supply line.



## BEFORE CHANGING APPLICATION OR PERFORMING MAINTENANCE

1. Wear protective clothing as described in Item 4 above.
2. Flush pump thoroughly with a neutralizing solution to prevent possible harm to personnel.
3. Verify compatibility of materials as stated in Item 2 of SAFETY PRECAUTIONS above.
4. Shut off power to motor at disconnect switch.

## IMPORTANT

1. The pump is constructed of cast iron or 316SS. Refer to pump model and product bulletin for mechanical seal material components. The pump may be chemically compatible with the solution but care should be taken to protect the pump components against unnecessary wear and physical abuse.
2. Record model and serial number for future reference. Specify model and serial number when ordering parts.
3. Pump flow curves are based upon water. Increased motor horsepower may be necessary for pumping other liquids or reduced motor horsepower may be permissible when pumping at higher discharge head.
4. Impellers are designed to offer maximum pump output and the motors are sized for non-overloading at maximum flow conditions.
5. Pump inlet piping should be one to two sizes larger than pump suction size.

6. Review parts list and maintain an emergency inventory of replacement items to assure that pump is returned to service with the least delay.

## PLUMBING

All piping should be supported independently of the pump. Piping should not exert any stress on the pump connections.

### 1. Suction Piping

Suction line must provide adequate suction pressure and smooth liquid flow for proper pump operation. Air entrapment in the suction line because of leaks or improper design may cause the pump to lose prime and fail. This pump is not self-priming, therefore the suction must be flooded at start up. Also, the suction line must provide sufficient pressure and smooth flow to pump inlet to prevent pump cavitation. A length of straight pipe a minimum of 5 times the pump inlet diameter and preferably 10 times the diameter should be installed in the suction line where it enters the pump. Elbows, fittings or valves installed close to the suction can disrupt liquid flow and cause malfunction. Suction lines must be at least the same size as the pump inlet or larger if possible. It is not recommended to use foot valves in the suction line to maintain liquid in the pump when it's not operating. If foot valves are used due to suction lift conditions, they must be properly maintained to avoid leaks resulting from wear or fouling. Suction piping must be designed to prevent air from being trapped in high spots in the piping. This condition may cause the pump to vapor lock as the air bubble moves into the pump.

### 2. Discharge Piping

For flow and discharge head control, it is advisable to install a valve (globe, ball, or other adjustable and non-leak type) in the discharge line close to the pump. The valve may be closed during system repairs to prevent backflow. By installing a check valve in the discharge line, backflow can also be prevented during maintenance or during periods of pump stoppage.

## PRE-START-UP

1. These pumps require no special care in mounting, although it is suggested that they be firmly bolted to a level surface. Adequate air movement over motor will help prevent overloads.
2. Connect electrical supply to the motor starter. Match voltage to nameplate voltage on motor. Incorrect voltage can cause fire or seriously damage motor, voiding warranty. If starter is furnished, verify that the starter is wired for the correct operating voltage and with the

correct overload heaters. It is recommended that a motor starter be installed for overload protection if one was not provided with the pump assembly.

3. Pump rotation is counterclockwise when looking at the pump suction, or clockwise when looking down on the motor fan. (Check rotation arrow.) For 3-phase motors, it is necessary to verify correct direction of rotation by momentarily "jogging" the motor. An instantaneous "ON-OFF" of the starter is ample to check rotation. To change direction of rotation, interchange any two of lines L<sub>1</sub>, L<sub>2</sub>, or L<sub>3</sub>.

NOTE: Incorrect rotation will cause pump damage, reduced performance or failure, voiding warranty.

**⚠ WARNING!** Do not operate pump without liquid for more than a few seconds, as damage to the mechanical seal will result. Double mechanical seal pumps require a constant flow of fresh water when pump is in operation.

4. All units are factory tested to confirm that the pump and motor functioned properly at time of shipment.
5. Suction casing must be flooded prior to starting.
6. Check correct operation of level control. Make necessary adjustments for establishing high level and low level.

## OPERATION

### Priming

Fill the volute and suction lines prior to operation. It is suggested that during initial start up, the discharge valve be closed and then opened as the motor develops full rpm's. If pump does not build up pressure as motor speed increases, shut down and reprime pump. Make sure that liquid flow into pump is not restricted (see "TROUBLESHOOTING").

Note: A centrifugal pump's flow and head (pressure) will vary with the amount of resistance (friction and flow restrictions) in the discharge line. As a valve on the discharge line opens, the flow and motor amp draw will increase and head will drop. As a valve on the discharge is closed, the flow and amp draw will decrease and the head will increase. If resistance in the discharge line is not sufficient, the pump will operate at a condition of maximum (or "choked") flow, also sometimes called "end of performance curve." Maximum horsepower is required to operate at this point and motor overload may result. If excessive amp draw and motor overload is recurring, reduce the system flow by installing a valve on the discharge line and restricting flow. Alternatively, reduce pump head by trimming impeller to a smaller diameter. Consult Application Engineering Department for assistance.

## PUMP SERVICE

**⚠ CAUTION:** Disconnect power to pump before servicing to avoid dangerous or fatal electrical shock hazards.



**If pump has been used to pump hazardous materials, be certain that all materials have been removed**

**prior to working on the pump. Inverting pump with liquid in it could cause liquid to get into motor bearings and cause damage. Before disassembling, be certain all liquid is removed from the pump.**

### IMPORTANT

Many causes of pump system failure are due to improper system design. Refer to the Troubleshooting List in this guide before carrying out pump inspection.

## TROUBLESHOOTING

### 1. Pump fails to build pressure.

Check for:

- a. Pump not primed.
- b. Incorrect rotation.
- c. Driver speed too low.
- d. Suction line restricted.
- e. Driver failure.
- f. Plugged or damaged impeller.
- g. Pump or impeller undersized.
- h. Pump cavitation.
- i. Impeller rubbing volute.

### 2. Pump fails to provide enough flow.

Check for:

- a. System resistance too high.
- b. Pump undersized.
- c. Pump not primed.
- d. Driver speed too low.
- e. Poor suction conditions.
- f. Impeller rubbing volute due to improper installation.
- g. Pump cavitation.
- h. Plugged or damaged impeller.

### 3. Excessive noise or vibration during operation.

Check for:

- a. Motor bearing failing.
- b. Pump cavitation.
- c. Impeller rubbing volute.

### 4. Leaking mechanical seal.

Check for:

- a. Improper assembly.
- b. Worn or cracked seal faces.
- c. Abrasive material build up around seal.
- d. Liquid flashing at seal faces (temp. too high).
- e. Seal pressure rating too low for the service.
- f. Chemical attack on seal parts.
- g. Seal operated dry or with a liquid having poor lubricating properties.

### 5. Pump gradually loses pressure and head.

Check for:

- a. Increasing temperature causing cavitation or liquid vaporization.
- b. Driver failure.

- c. Suction lift too high.
- d. Air entering suction line.

#### 6. Motor/pump overheating.

Check for:

- a. Excessive flow and amp draw. (Throttle discharge)
- b. Low voltage or frequency.
- c. Flow too low with resulting heat rise.
- d. Bearing failure.
- e. System temperature too high.

#### DISASSEMBLY

1. Disconnect power source to motor.
2. Disconnect electrical connections tagging wires carefully to preserve correct rotation. Loosen motor base.
3. Remove pump and motor assembly to repair area. Observe position of all parts prior to disassembly. (Note: Volute may be left in piping.)
4. Remove bolts and remove volute from pump.
5. Remove impeller. Unscrew impeller lockdown. Slide impeller off shaft. **Do Not** throw shaft key away. A small pair of c-clamp or standard vise grips may be clamped to the pump shaft to prevent rotation while unscrewing impeller lockdown. Avoid damaging the set screws of the shaft with the vise grips.
6. Remove seal head from the shaft. Slide seal head from the shaft.
7. Remove four motor bolts and remove bracket from motor.
8. Remove seal seat from bracket. Use wooden or plastic dowel to tamp the seat from the bracket.

#### REASSEMBLY SINGLE SEAL


1. Clean seat cavity of the bracket thoroughly.
2. Thoroughly clean pump shaft. Assure that the shaft is not grooved and that there is no evidence of pitting or fretting. Polish the shaft with extra fine emery cloth and clean the keyway. If the shaft is grooved, fretted or worn, replace it.
3. Install the pump shaft onto the motor shaft, aligning set screws of the pump shaft with the keyway of the motor shaft. Ensure all debris and burrs are removed from the motor shaft and that the slinger is in place.
4. Place the bracket on a firm surface with the seat cavity (pump end) up. Then place a small amount of vegetable oil on the seat cup or 'O'-ring seat. Place the seat in the seat cavity with the polished face up toward the pump end. Evenly push seat into cavity with fingers, then gently tap seat into place with a wooden dowel or plastic rod. (1-1/8" outside diameter). To help ensure the seat is not damaged, place the cardboard disk supplied with the seal over the seat face.
5. Place bracket to motor (aligning the base if applicable). Secure bracket with four motor bolts.
6. Pull out pump shaft as far as it will go toward volute

end and slightly snug one set screw to hold shaft in place.

#### 7. Install seal head assembly.

- a. Lubricate shaft and elastomer with vegetable oil.
- b. Install rotary seal head onto pump shaft and slide toward seat until carbon face touches seal seat.
- c. Install seal spring and retainer.
- d. Install impeller. Install key in pump shaft. Slide impeller onto shaft ensuring that the spring retainer does not slip between the shoulder of the shaft and the hub of the impeller. Install impeller washer and lockdown. (10 ft. lbs) Tighten securely. Caution: Serviceable Loctite must be used on lockdown bolt. Lockwasher pairs must be assembled cam face to cam face. See diagram A.

DIAGRAM A

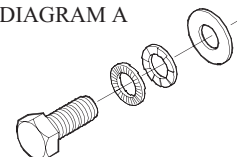

LOCKDOWN ASSEMBLY

- e. Loosen pump shaft set screw.
- f. Install new volute gasket and mount volute to bracket. Secure with bolts and tighten evenly.
- g. Slide pump shaft forward until impeller touches volute. Move shaft back with a screwdriver .010-.015". Tighten pump shaft set screws. Turn shaft by hand to ensure impeller does not rub against volute.

#### Double Seal Installation

##### REASSEMBLY

1. Clean seat cavity of the bracket and seal plate thoroughly.
2. Thoroughly clean pump shaft. Assure that the shaft is not grooved and that there is no evidence of pitting or fretting. Polish the shaft with extra fine emery cloth and clean the keyway. If the shaft is grooved, fretted or worn, replace it.
3. Install the pump shaft onto the motor shaft, aligning set screws of the pump shaft with keyway of the motor shaft. Ensure all debris and burrs are removed from the motor shaft and that the slinger is in place.
4. Place bracket on motor (aligning the base if applicable). Secure bracket with four motor bolts.
5. Pull out pump shaft as far as it will go toward volute end and slightly snug one set screw to hold shaft in place.
6. Place a small amount of vegetable oil on the seat cup. Install seats into seat plate and bracket with polished faces up. Evenly push seat into place with a wooden

- dowel or plastic rod (1-1/8" outside diameter). To help ensure the seat is not damaged, place the cardboard disk supplied with the seal under the end of the dowel to prevent damaging the seat face.
7. Install seal head assembly:
    - a. Lubricate shaft and elastomer with vegetable oil.
    - b. Install first rotary seal head onto pump shaft and slide toward seat using a twisting motion until carbon face touches seal seat.
    - c. Install second rotary seal head onto shaft sleeve with carbon facing towards pump end.
  8. Install seal plate onto pump end of bracket with new gasket and tighten three allen capscrews evenly (note: use Teflon pipe sealant on bolts).
  9. Install impeller:
    - a. Install key in pump shaft.
    - b. Slide impeller onto shaft
    - c. Install impeller washer and lockdown. Tighten.
  10. Loosen pump shaft set screw.
  11. Install new volute gasket, or O-ring and mount volute. Secure with bolts and tighten evenly.
  12. Move shaft back with a screwdriver .010-.015". Tighten pump shaft set screws. Turn shaft by hand to ensure impeller does not rub against volute.



**SERFILCO<sup>®</sup>, LTD.**

2900 MacArthur Blvd.  
Northbrook, IL 60062-2005 U.S.A.  
e-mail: [sales@serfilco.com](mailto:sales@serfilco.com)

847-509-2900  
800-323-5431  
FAX: 847-559-1995

[www.serfilco.com](http://www.serfilco.com)