

PRIMING CHAMBER

OPERATION AND
SERVICE GUIDE
O-255D
MAY 2000

MODEL	PRICE CODE
PC-3 x 2	99-0308

Refer to Bulletin A-107.

Priming Chambers are for use with horizontal style mechanical seal or magnetic drive centrifugal pumps when the liquid is below the pump centerline. Verify solution compatibility with materials of construction of priming chamber.

SAFETY PRECAUTIONS BEFORE STARTING PUMP

1. Read operating instructions and instructions supplied with chemicals to be used.
2. Refer to a chemical resistance chart for compatibility of materials in pump with solution to be used.
3. Note temperature and pressure limitations.
4. Personnel operating pump should always wear suitable protective clothing: face mask or goggles, apron and gloves.
5. All piping must be supported and aligned independently of the pump.
6. Always close valves slowly to avoid hydraulic shock.
7. Ensure that all fittings and connections are properly tightened.

BEFORE CHANGING APPLICATION OR PERFORMING MAINTENANCE


1. Wear protective clothing as described in item 4 above.
2. Flush pump thoroughly with a neutralizing solution to prevent possible harm to personnel.
3. Verify compatibility of materials as stated in item 2 Safety Precautions above.
4. Shut off power to motor at disconnect switch.

PUMP - MOTOR

Refer to operating instructions provided with pump-motor assembly for proper installation, electrical connection and operation.

PRIMING CHAMBER

1. Install inlet piping to priming chamber as shown above. The pipe size should be the same as the inlet connection on the priming chamber. A suction strainer is recommended at the pipe inlet.

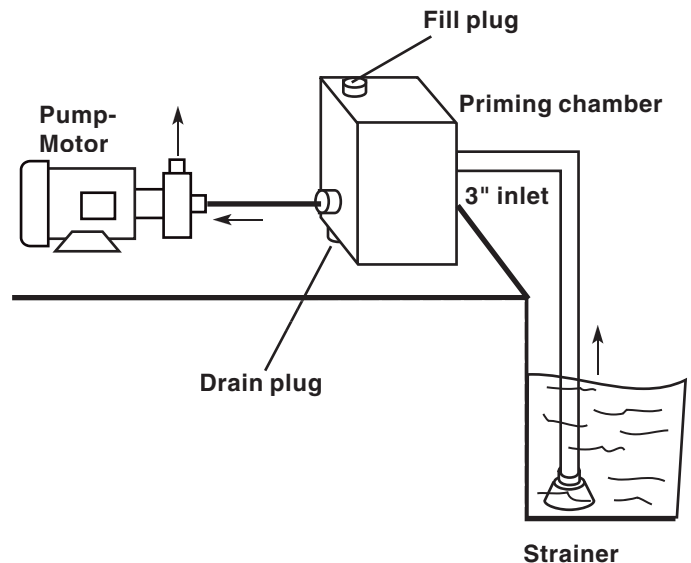

2. Open the fill plug. Fill the chamber with water or solution compatible with that being pumped until the level is 4" from the top of the chamber. Replace and tighten the fill plug. The pump is now primed.
3. Energize the pump-motor assembly. Solution will now flow from a level below the priming chamber into the pump and out the pump discharge. A valve in the pump discharge will aid in priming.
4. If solution does not flow, then de-energize the motor and inspect for:
 - A. Liquid level in the pit. It must always be above the bottom of the inlet pipe to avoid vortexing and entrapping air.
 - B. Loose connections between the inlet strainer and priming chamber.
 - C. Loose or open vent plug.
5. Subsequent stopping and re-starting of pump should not necessitate repriming (refilling priming chamber).
6. To drain chamber, open drain plug at underside of priming chamber and loosen fill plug.



SERFILCO, LTD.

2900 MacArthur Blvd. 847-509-2900
Northbrook, IL 60062-2005 U.S.A. 800-323-5431
e-mail: sales@serfilco.com FAX: 847-559-1995
www.serfilco.com